





 
 

 

 


 
 


Originale	Sostituto
 Power	 Power
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 M	 Menu
 [i]	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 -/--	 Guide
 PP	 Back
 P/CH+	 Ch +
 P/CH-	 Ch -
 P<P	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 I-II	 Dual
 TV	 TV/R
 AV	 AV
 Red/Sound	 Red
 Green/Picture	 Green
 Yellow/Feature	 Yellow
 Blue/Install	 Blue
 [≡]	 Text





Originale	Sostituto
 [=o]	 Smart
 [=+]	 Format
 [=x]/[· ·]	 3D
 [/ =]/[*]	 Subt
 [=♦]/[+]	 Options
 [=?]/PC	 Media
 [=i]	 List

Originale	Sostituto

