 
 







Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Play	 Play
 Pause/Step	 Pause
 Stop	 Stop
 >>	 >>

Originale	Sostituto
 <<	 <<
 >>	 >>
 <<	 <<
 DVD Menu	 D. Menu
 Title	 List
 Display	 Info
 Return	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 O)/Audio	 Dual
 [...] /Subtitle	 Subt
 Camera/Angle	 Options
 Setup	 Menu
 Marker	 Media





	Originale	Sostituto		Originale	Sostituto
	Search	TV/R			
	Program	Sleep			
	Zoom	+ Shift + Eject			
	Repeat	Text			
	A-B	3D			
	Random	Smart			
	Resolution	Format			
	Power Tv	+ Shift + Power			
	AV Tv	AV			
	PR/CH+ Tv	Ch +			
	PR/CH- Tv	Ch -			
	Vol+ Tv	Vol +			
	Vol- Tv	Vol -			

	Originale	Sostituto		Originale	Sostituto

