




 

 







 

 

 
 
 

 



 



 



 
 


 

 









 
 







 


 



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol -
	Mute		Mute		1		1
	Source		AV		2		2
	Tv/AV		TV/R		3		3
	I/II		Dual		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	*/SSM		Smart		7		7
	Stop		Stop		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		Swap		Pre Ch
	Left		Left		Auto		Guide
	OK		Ok		[≡]/Text		Text
	PR+		Ch +		Sleep		Sleep
	PR-		Ch -		[≡M]/Mode		Options
	Vol+		Vol +		[≡x]/Update		Subt





Originale		Sostituto		Originale	Sostituto
	Blue/List		Blue		
	Yellow/Q.View		Yellow		
	Green/APC/PSM		Green		
	Red/PIP		Red		
	POP		Media		
	[≡i]/Index		Info		
	[≡o]/Time		List		
	[≡♦]/Size		Format		
	[≡+]/Hold		Eject		
	[.≡]/Mix		D. Menu		
	[≡?]/Reveal		3D		

