















 







 



 
 




 
 
 

 











 











 









Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 1	 1	 OK	 OK
 2	 2	 Down	 Down
 3	 3	 P-	 CH- / Page-
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/AKT	 Red / Netflix / Search
 9	 9	 Green/Timer	 Sleep / Timer
 0/AV	 AV / Input / RDS	 Green/Timer	 Green / APP / Repeat
 0/AV	 0	 Yellow/[I]	 Yellow / YouTube / Repeat
 Up	 Up	 Blue/[++]	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 -O	 << / Tune-
 Right	 Right	 O+	 >> / Tune+
 Vol+	 Vol+	 -*	 I<< / Preset-
 Left	 Left	 *+	 >>I / Preset+

Originale	Sostituto	Originale	Sostituto
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 1	 1	 OK	 OK
 2	 2	 P-	 CH- / Page-
 3	 3	 Down	 Down
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/AKT	 Red / Netflix / Search
 9	 9	 Green/Timer	 Green / APP / Repeat
 0/AV	 AV / Input / RDS	 Green/Timer	 Sleep / Timer
 0/AV	 0	 Yellow/[I]	 Yellow / YouTube / Repeat
 P+	 CH+ / Page+	 Blue/[++]	 Blue / Prime Video / Random
 Up	 Up	 -O	 << / Tune-
 Right	 Right	 O+	 >> / Tune+
 Vol+	 Vol+	 -*	 I<< / Preset-
 Left	 Left	 *+	 >>I / Preset+

Originale	Sostituto	Originale	Sostituto
 DIMMER MUTE		 TV	 DVD
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 OK
 EXIT	 RETURN	 CLEAR	 BACK
 CANCEL	 LIST	 SMART	 CH PAGE
 VOL+	 MEDIA	 DISPLAY	 TV
 VOL-	 REPEAT	 DVD	 CD- STB
 1	 YouTube	 VIDEO	 TAPE
 2	 REPEAT A-B	 TUNER	 AUX- HDD
 3	 RANDOM	USB	BLUETOOTH
4	TUNE-	HDMI- SAT	FC
5	TUNE+	GUIDE EPG	FAV MARKER
6	PRESET-	NETFLIX	APP
7	PRESET+	YouTube	Prime Video
8	SEARCH	REPEAT	REPEAT A-B
9	RANDOM	SEARCH	REPEAT A-B
0	RANDOM	REPEAT A-B	RANDOM





Originale	Sostituto	Originale	Sostituto
PIP	PIP		
IDTV-?	IDTV-?		
P/C-ATS	P/C-ATS		
AUX	AUX		

