

 



 















 



 

 

 





 
 


















 




 

 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		P < P		Display / Media
	Up		Up		0		0
	Left		Left		Aspect		Picture / Format
	Right		Right		Swap		Back / Return
	Down		Down		P - / CH -		CH- / Page-
	M Menu		Menu / Home		P + / CH +		CH+ / Page+
	[ i ] Info		Info / Angle		Vol -		Vol-
	OK		OK		Vol +		Vol+
	1		1		Mute		Mute / Dimmer
	2		2		I - II		Audio / Lang I/II
	3		3		[ TV ]		Smart / List
	4		4		Source		AV / Input / RDS
	5		5		Red / PIP		Red / Netflix / Search
	6		6		Green		Green / APP / Repeat
	7		7		Yellow		Yellow / YouTube / Repeat
	8		8		Blue		Blue / Prime Video / Random
	9		9		Text		Text / Goto





	Originale	Sostituto	Originale	Sostituto
	Timer	Sleep / Timer		
	Hold	Stop / Hold		
	Cancel	Exit / Cancel / Clear		
	Mix	+  Shift + Text /		
	Size	Zoom / Size		
	Help	Setup / OPT /		
	Index	D.Menu / Top		

