








 










 






 










Originale	Sostituto
 On/Off	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Picture	 Format

Originale	Sostituto
 Sound	 Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 FAV	 Shift + Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 Tv	 TV/R





Originale		Sostituto	
	YouTube		Media
	Netflix		Smart
	NET+		Shift + Media
	Rec		Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Rec List		List
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Red/Goto		Red
	Green/A-B		Green
	Yellow/3D		Yellow
	Blue/Repeat		Blue

Originale	Sostituto

