 







 

 
 
 
 


 

 
 


 
 
 

 


 


 



 


 
 





 




 




 

 


 







| Originale | | Sostituto | | Originale | | Sostituto | |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------|----------------|---------------------------------------------------------------------------------------|---------|
|  | Power |  | Power |  | Vol+ |  | Vol + |
|  | Sleep |  | Sleep |  | Vol- |  | Vol - |
|  | CBL/SAT |  | 1 |  | Mute |  | Mute |
|  | Media Player |  | 2 |  | Info |  | Info |
|  | Blu-ray/DVD |  | 3 |  | Option |  | Options |
|  | Game |  | 4 |  | Back |  | Back |
|  | AUX |  | 5 |  | Setup |  | Menu |
|  | Tuner |  | 6 |  | Up |  | Up |
|  | USB |  | 7 |  | Down |  | Down |
|  | Tv Audio |  | 8 |  | Right |  | Right |
|  | CD |  | 9 |  | Left |  | Left |
|  | Bluetooth |  | Guide |  | Enter |  | Ok |
|  | Internet Radio |  | 0 |  | I<</Tune- |  | I<< |
|  | CH/Page+ |  | Pre Ch |  | Play |  | Play |
|  | CH/Page- |  | Ch + |  | Pause |  | Pause |
|  | Eco |  | Ch - |  | >>I/Tune+ |  | >>I |
| | |  | 3D |  | Smart Select 1 |  | D. Menu |



