 



 







 



 











 











 





 

 

 













 







Originale		Sostituto		Originale		Sostituto	
	Standby / On		Power		Last PR		Smart / List
	Open / Close		Eject / Surround		0 / A.DUB		0
	1 / ATR TRK -		1		TV / VCR		AV / Input / RDS
	2 / ATR		2		DVD		Shift + 2
	3 / ATR TRK +		3		TV View		TV/Radio /
	Volume +		Vol+		VCR		Shift + 4
	4 / Shuttle <<		4		<<		<< / Tune-
	5 / Shuttle		5		Stop		Stop / Hold
	6 / Shuttle >>		6		Play / Pause		Play / Slow
	Prog +		CH+ / Page+		Play / Pause		Pause / Step / Freeze
	Volume -		Vol-		>>		>> / Tune+
	Prog -		CH- / Page-		I<< / Rec		I<< / Preset-
	7 / SVHS		7		I<< / Rec		Rec / Rec Mode
	8		8		Angle / Timer		Info / Angle
	9		9		Angle / Timer		Sleep / Timer
	Mute		Mute / Dimmer		>>I / Frame/Step		>>I / Preset+
	3D Sound		D.Menu / Top		Zoom / Speed		Zoom / Size





Originale	Sostituto	Originale	Sostituto
Subtitle	Subtitle / EQ		
Display	Display / Media		
Audio	Audio / Lang I/II		
Setup	Setup / OPT /		
Up	Up		
Menu	Menu / Home		
Left	Left		
Enter	OK		
Right	Right		
Title	Sound / Title		
Down	Down		
Clear	Exit / Cancel / Clear		
Mark / Index	Fav / Marker / PC		
Return / CLK/CTR	Back / Return		
A-B / Mode / Repeat	Yellow / YouTube / Repeat		

Originale	Sostituto	Originale	Sostituto

