

 




 



 




 


 












 



 



 
 
 


 
 


 


 
 





 






 






Originale		Sostituto		Originale		Sostituto	
	Power AMP		Power		Info CD		Info
	Power CD	 + 	Shift + Power		Vol+		Vol +
	1 CD		1		Vol-		Vol -
	2 CD		2		Mute		Mute
	3 CD		3		Preset + CD		Ch +
	4 CD		4		Preset - CD		Ch -
	5 CD		5		Enter CD		Ok
	6 CD		6		Up CD		Up
	7 CD		7		Down CD		Down
	8 CD		8		Right CD		Right
	9 CD		9		Left CD		Left
	0 CD		0		Pure Direct CD		Options
	+10 CD		Guide		Play/Pause CD		Play
	Clear CD		Pre Ch		Stop CD		Stop
	Source CD		AV		<< CD		<<
	Menu CD		Menu		>> CD		>>
	Mode CD		Dual		I<< CD		I<<





Originale	Sostituto
>>I CD	>>I
Repeat CD	Text
Program CD	Sleep
Random CD	Subt
Dimmer CD	Format
CD AMP	TV/R
Recorder AMP	Red
Network AMP	Exit
Phono	Smart
Tuner	Back
Internet Radio Preset 1	List
Internet Radio Preset 2	D. Menu
Internet Radio Preset 3	3D
Power NET	Media
Enter NET	Shift + Ok
Up NET	Shift + Up
Down NET	Shift + Down

Originale	Sostituto
Right NET	Shift + Right
Left NET	Shift + Left
Pure Direct NET	Shift + Options
1 NET	Shift + 1
2 NET	Shift + 2
3 NET	Shift + 3
4 NET	Shift + 4
5 NET	Shift + 5
6 NET	Shift + 6
7 NET	Shift + 7
8 NET	Shift + 8
9 NET	Shift + 9
+10 NET	Shift + Guide
0 NET	Shift + 0
Clear NET	Shift + Pre Ch
Mode NET	Shift + Dual
<< NET	Shift + <<





Originale	Sostituto
>> NET	SHIFT +  Shift + >>
Info NET	SHIFT +  Shift + Info
I<< NET	SHIFT +  Shift + I<<
>>I NET	SHIFT +  Shift + >>I
Stop NET	SHIFT +  Shift + Stop
Play/Pause NET	SHIFT +  Shift + Play
Preset + NET	SHIFT +  Shift + Ch +
Preset - NET	SHIFT +  Shift + Ch -
Menu NET	SHIFT +  Shift + Menu
Source NET	SHIFT +  Shift + AV
AUX	SHIFT +  Shift + TV/R
Dimmer NET	SHIFT +  Shift + Format
Random NET	SHIFT +  Shift + Subt
Program NET	SHIFT +  Shift + Sleep
Repeat NET	SHIFT +  Shift + Text

Originale	Sostituto

