 


 
 


 
 



 

 

 
 



 















 







 
 

 


 


 


 



 


 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		TXT		Text
	TV		TV/R		ALT		Media
	Sound		Shift + Dual		Recall		Pre Ch
	i		Info		Menu		Menu
	Audio		Dual		TV Guide		Guide
	Mute		Mute		P+		Ch +
	1		1		P-		Ch -
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Subtitles		Subt
	8		8		Exit		Exit
	9		9		V+		Vol +
	0		0		V-		Vol -
	UHF		Smart				

