



Originale	Sostituto	Originale	Sostituto
Standby	Power	>>  / Subpage	>>  / Preset+
Source	AV / Input / RDS	Menu	Menu / Home
Red	Red / Netflix / Search	Exit	Exit / Cancel / Clear
Green	Green / APP / Repeat	Up	Up
Yellow	Yellow / YouTube / Repeat	Left	Left
Blue	Blue / Prime Video / Random	Enter	OK
P Mode	Picture / Format	Right	Right
S Mode	Sound / Title	Play/Pause / Timeshift	Play / Slow
Freeze	Pause / Step / Freeze	Play/Pause / Timeshift	Shift + Play /
TXT	Text / Goto	Down	Down
Mix / Fav List	Fav / Marker / PC	Stop / EPG	Shift + Stop /
Size / Subtitle	Zoom / Size	Stop / EPG	Stop / Hold
Cancel / Audio	Shift + Exit / Cancel / Clear	Vol +	Vol+
Record	Rec / Rec Mode	Mute	Mute / Dimmer
<< / Index	<< / Tune-	CH +	CH+ / Page+
>> / Hold	>> / Tune+	Vol -	Vol-
<< / Reveal	<< / Preset-	TV / Radio	TV/Radio /

Originale	Sostituto	Originale	Sostituto
Standby	Power	>>  / Subpage	>>  / Preset+
Source	AV / Input / RDS	Menu	Menu / Home
Red	Red / Netflix / Search	Exit	Exit / Cancel / Clear
Green	Green / APP / Repeat	Up	Up
Yellow	Yellow / YouTube / Repeat	Left	Left
Blue	Blue / Prime Video / Random	Enter	OK
P Mode	Picture / Format	Right	Right
S Mode	Sound / Title	Play/Pause / Timeshift	Play / Slow
Freeze	Pause / Step / Freeze	Play/Pause / Timeshift	Shift + Play /
TXT	Text / Goto	Down	Down
Mix / Fav List	Fav / Marker / PC	Stop / EPG	Shift + Stop /
Size / Subtitle	Zoom / Size	Stop / EPG	Stop / Hold
Cancel / Audio	Shift + Exit / Cancel / Clear	Vol +	Vol+
Record	Rec / Rec Mode	Mute	Mute / Dimmer
<< / Index	<< / Tune-	CH +	CH+ / Page+
>> / Hold	>> / Tune+	Vol -	Vol-
<< / Reveal	<< / Preset-	TV / Radio	TV/Radio /





Originale	Sostituto
CH -	CH / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Display	Display / Media
0	0
Recall	Back / Return

Originale	Sostituto

