

 

 




 


 
 



Originale	Sostituto
Standby	Power
Off	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
_/---/Del	GUIDE Guide
Mute	Mute
Vol+	Vol +
Vol-	Vol -
Content (Home)	HOME SMART Smart

Originale	Sostituto
Source	AV AV
CH+	Ch +
CH-	Ch -
Magicinfo/Lite /S	MEDIA Media
Menu	Menu
Blank	PRE-CH Pre Ch
Tools	OPT Options
Info	INFO Info
Return	BACK Back
Exit	EXIT Exit
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK Ok
Red/PC	Red
Green/DVI	Green





Originale	Sostituto	Originale	Sostituto
 Yellow/HDMI	 Yellow		
 Blue/DP	 Blue		
 Magicinfo	 TV/R		
 3D	 3D		
 Lock	 Eject		
 Stop	 Stop		
 <</ <<	 <<		
 Play	 Play		
 Pause	 Pause		
 >>/>>	 >>		

Originale	Sostituto

