

 




 



 











 

 
 
 

 


 

 
 
 





Originale	Sostituto
 Power	 Power
 TV/DTV	 Smart
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Info	 Info
 FAV	 Shift + Pre Ch
 Picture	 Shift + Format

Originale	Sostituto
 Sound	 Shift + Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 EPG	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I/II	 Dual
 Still	 Format
 Zoom	 Eject
 Exit	 Exit





Originale	Sostituto	Originale	Sostituto
Radio	TV/R	Mix/CH Down	Shift + Ch -
Next	>>I	Subcode/Source	Shift + AV
Lang	List	Index/Position	Media
Subtitle	Subt	Hold/Sleep	Sleep
Back	Back		
Forward	>>		
Play	Play		
Pause	II		
Stop	■		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Text	Text		
Size/PIP	3D		
Reveal/Swap	Options		
Cancel/CH Up	Shift + Ch +		

Originale	Sostituto	Originale	Sostituto
Radio	TV/R	Mix/CH Down	Shift + Ch -
Next	>>I	Subcode/Source	Shift + AV
Lang	List	Index/Position	Media
Subtitle	Subt	Hold/Sleep	Sleep
Back	Back		
Forward	>>		
Play	Play		
Pause	II		
Stop	■		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Text	Text		
Size/PIP	3D		
Reveal/Swap	Options		
Cancel/CH Up	Shift + Ch +		

