

 

 

 
 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 << REW	 I<<
 1	 1	 >> F FWD	 >>
 2	 2	 >> F FWD	 >>I
 3	 3	 Pause/Still	 Pause
 4	 4	 Stop	 Stop
 5	 5	 Up /Channel + / Tracking +	 Up
 6	 6	 Down / Channel - / Tracking -	 Down
 7	 7	 Left	 Left
 8	 8	 Right	 Right
 9	 9	 Clear	 Exit
 0	 0	 OK / CLK / CNT	 Ok
 TV/VCR	 TV/R	 i / Menu	 Menu
 AD-Skip	 Subt	 Show View	 Smart
 REC / QTR	 Rec	 Speed	 Media
 Eject	 Eject	 AV	 AV
 Play	 Play	 Child Lock	 D. Menu
 << REW	 <<	 VISS	 Info

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 << REW	 I<<
 1	 1	 >> F FWD	 >>
 2	 2	 >> F FWD	 >>I
 3	 3	 Pause/Still	 Pause
 4	 4	 Stop	 Stop
 5	 5	 Up /Channel + / Tracking +	 Up
 6	 6	 Down / Channel - / Tracking -	 Down
 7	 7	 Left	 Left
 8	 8	 Right	 Right
 9	 9	 Clear	 Exit
 0	 0	 OK / CLK / CNT	 Ok
 TV/VCR	 TV/R	 i / Menu	 Menu
 AD-Skip	 Subt	 Show View	 Smart
 REC / QTR	 Rec	 Speed	 Media
 Eject	 Eject	 AV	 AV
 Play	 Play	 Child Lock	 D. Menu
 << REW	 <<	 VISS	 Info





Originale		Sostituto	
	A-TR		List
	Zero / Back		Back
	OTPB		Sleep

Originale		Sostituto	

