







 


 
 
 
 
 
 

 
 
 
 
 
 
 


 
 
 
 
 
 












Originale	Sostituto
 Power	 Power
 Input Select	 AV
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog+	 Ch +
 Prog-	 Ch -
 Satellite Link	 Media
 Mode	 Smart

Originale	Sostituto
 Timer/Prog.	 Sleep
 Time Slip	 Guide
 Setup	 Options
 Audio	 Dual
 Clear	 Exit
 Chapter Mark	 List
 Disc Menu	 D. Menu
 Top Menu	 Menu
 Return	 Back
 Display	 Info
 Up	 Up
 Enter	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 I<< Skip	 I<<
 Skip >>I	 >>I



