

 






 






 


 
 
 
 
 
 

 
 
 
 
 
 
 
 
 

 
 
 

 






 





| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  Input Select |  AV |
|  Open/Close |  Eject |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Prog+ |  Ch + |
|  Prog- |  Ch - |
|  Satellite Link |  Media |
|  Mode |  Smart |

| Originale | Sostituto |
|--|---|
|  Timer/Prog. |  Sleep |
|  Time Slip |  Guide |
|  Setup |  Options |
|  Audio |  Dual |
|  Clear |  Exit |
|  Chapter Mark |  List |
|  Disc Menu |  D. Menu |
|  Top Menu |  Menu |
|  Return |  Back |
|  Display |  Info |
|  Up |  Up |
|  Enter |  Ok |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  I<< Skip |  I<< |
|  Skip >>I |  >>I |



