












 







 
 



 


 







 

 




 
 
 




 






 
 

 
 


 



 

 





 






 



 









Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Timer/Prog.	 Sleep
 Input Select	 AV	 Time Slip	 Guide
 Open/Close	 Eject	 Setup	 Options
 1	 1	 Audio	 Dual
 2	 2	 Clear	 Exit
 3	 3	 Chapter Mark	 List
 4	 4	 Disc Menu	 D. Menu
 5	 5	 Top Menu	 Menu
 6	 6	 Return	 Back
 7	 7	 Display	 Info
 8	 8	 Up	 Up
 9	 9	 Enter	 Ok
 0	 0	 Down	 Down
 Prog+	 Ch +	 Right	 Right
 Prog-	 Ch -	 Left	 Left
 Satellite Link	 Media	 I<< Skip	 I<<
 Mode	 Smart	 Skip >>I	 >>I

Originale	Sostituto	Originale	Sostituto
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 II	 ■	 ●
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 ▲	 AV
 TOP MENU	 MENU	 DISPLAY	 INFO
 CLEAR	 EXIT	 RETURN	 BACK
 HOME	 SMART	 APP	 MEDIA
 + VOL	 + CH		
 - VOL	 - CH		
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 GUIDE	 0	 FAV	 PRE-CH
 A	 B	 C	 D
 www.mandis.tv			



