



 

 

 

 

 

 

 



 



 

 
 
 


 
 

 



 

 

 
 


 

 

 






 

 





 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol -		Vol-
	TV		Shift + 1		Source		AV / Input / RDS
	1		1		P -		CH- / Page-
	2		2		Guide		Guide / EPG / -/--
	3		3		Menu		Menu / Home
	4		4		W.Link		Shift + Smart / List
	5		5		Tools		Setup / OPT /
	6		6		Up		Up
	7		7		Return		Shift + Back / Return
	8		8		Wheel Left		Shift + Left
	9		9		Left		Left
	- / --		Shift + Guide / EPG / -/--		Enter		OK
	0		0		Wheel Right		Shift + Right
	Pre-CH		Back / Return		Right		Right
	Vol +		Vol+		Info		Info / Angle
	Mute		Mute / Dimmer		Down		Down
	P +		CH+ / Page+		Exit		Exit / Cancel / Clear





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search		Stop		Stop / Hold
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	TTX / MIX		Text / Goto				
	Info.L		Shift + Info / Angle				
	DMA		D.Menu / Top				
	E.Mode		Display / Media				
	Content		Smart / List				
	Subt.		Subtitle / EQ				
	<<		<< / Tune-				
	<<		Shift + << /				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	>>		Shift + >> /				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				

