



 





 



 
 



 



 

 
 

 

 
 
 


 
 

 


 
 
 
 
 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol +
 [i+]	 Info	 Vol-	 Vol -
 TV/DTT	 Smart	 Mute	 Mute
 Input	 AV	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Red	 Red
 3	 3	 Green	 Green
 4	 4	 Yellow	 Yellow
 5	 5	 Blue	 Blue
 6	 6	 [≡]	 Text
 7	 7	 [≡+]/Status	 3D
 8	 8	 [...]	 Subt
 9	 9	 [≡?]/Skip	 Options
 0	 0	 Menu	 Menu
 [> <]	 Format	 Guide	 Guide
 White	 Pre Ch	 Nothing 3	 Shift + 3
 I/II/[≡i]	 Dual	 Exit	 Exit





	Originale	Sostituto	Originale	Sostituto
	Power			
	P+			
	P-			
	Up			
	Down			
	Right			
	Left			
	Enter			
	Menu			
	Pause			
	Play			
	Stop			
	<<			
	>>			
	I<<			
	>>I			



