

 

 

 

 

 

 

 

 

 

 

 

 

 
 
 

 







Originale	Sostituto
 Power	 Power
 TV	 Smart / List
 TV	 Shift + 1
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 Zoom	 Zoom / Size

Originale	Sostituto
 Picture	 Picture / Format
 Sound	 Sound / Title
 Vol +	 Vol+
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 CH -	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 I / II	 Audio / Lang I/II
 Still	 Shift + Pause / Step /
 HDMI	 Shift + 0



