




 

 

 

 
 
 

 



 

 


 
 





 






Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 F	 Menu
 Preset/Folder Up	 Ch +
 Preset/Folder	 Ch -
 Jukebox/Memor	 Smart
 Auto Dj	 Media
 Delete	 Exit
 Repeat	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Tuning+	 Right
 >>I	 >>I

Originale	Sostituto
 I<<	 I<<
 Tuning-	 Left
 Sound Effect	 Dual
 Region EQ	 Subt
 (i)	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clock	 Shift + AV
 Alarm	 TV/R



