

 













 

 

 



 





 














 




 









Originale	Sostituto		
	Power		Power
	Ambilight		D.Menu / Top
	Sources		AV / Input / RDS
	Settings		Setup / OPT /
	Top Picks		Picture / Format
	Search		TV/Radio /
	Exit/TV		Exit / Cancel / Clear
	Tv Guide		Guide / EPG / -/--
	Windows		Display / Media
	List		Smart / List
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	←		Back / Return
	+		Info / Angle

Originale	Sostituto		
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Netflix		Shift + Red / Netflix /
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





	Originale	Sostituto	Originale	Sostituto
	7	7		
	8	8		
	9	9		
	Subtitle	Subtitle / EQ		
	0	0		
	Text	Text / Goto		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	Rec	Rec / Rec Mode		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		

