


 



 





 



 




 
 







 








 







Originale	Sostituto
	 Power
	 Stop
	 Pause
	 Rec
	 <<
	 Play
	 >>
	 Red
	 Green
	 Yellow
	 Blue
	 Pre Ch
	 D. Menu
	 AV
	 Smart
	 Back
	 Options

Originale	Sostituto
	 Up
	 Down
	 Right
	 Left
	 Ok
	 >>I
	 I<<
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Mute
	 1
	 2
	 3
	 4
	 5



