





 

 

 




 


 

 


 
 
 

 
 

 


 




Originale	Sostituto
 Power	 Power
 Input	 AV
 Digital/Analog	 TV/R
 Sync Menu	 Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Exit	 Exit
 [=]	 Text
 Red	 Red

Originale	Sostituto
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 YouTube	 Media
 Netflix	 Shift + Media
 Sleep	 Sleep
 Info	 Info
 Guide	 Guide
 Options	 Options
 Home	 Smart
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok	 Ok
 Vol+	 Vol +





Originale	Sostituto	Originale	Sostituto
Vol-	Vol -		
Mute	Mute		
Recall	Pre Ch		
CH+	Ch +		
CH-	Ch -		
Audio	Dual		
[...]	Subt		
Title List	List		
<<	<<		
Play	Play		
>>	>>		
l<<	l<<		
Pause	Pause		
>>l	>>l		
Rec	Rec		
Stop	Stop		
[+]	3D		

