



Originale	Sostituto
TEST	Text / Goto
1	1
1	Shift + 1
2	2
2	Shift + 2
3	3
3	Shift + 3
EFFECT	Picture / Format
4	4
4	Shift + 4
5	5
5	Shift + 5
6	6
6	Shift + 6
7/P	Shift + 7
7/P	7
8	8

Originale	Sostituto
8	Shift + 8
9	9
9	Shift + 9
LEVEL	Down
LEVEL	Shift + Down
LEVEL	Shift + CH- /
LEVEL	Left
LEVEL	Vol-
LEVEL	CH- / Page-
LEVEL+	Up
LEVEL+	Shift + Up
LEVEL+	Shift + CH+ /
LEVEL+	Right
LEVEL+	Vol+
LEVEL+	CH+ / Page+
10/RETURN	Shift + Guide / EPG / -/-
10/RETURN	Guide / EPG / -/-





Originale	Sostituto
Audio Standby	Audio / Lang I/II
1	1
2	2
3	3
TV Standby	Power
4	4
5	5
6	6
VCR Standby	Shift + Power
7/P	7
DVD Standby	Shift + 2
Play/TA/News/Info	Play / Slow
Sleep	Sleep / Timer
I<</PTY-	I<< / Preset-
Pause/PTY Search	Pause / Step / Freeze
>>I/PTY+	>>I / Preset+
Stop/Display	Stop / Hold

Originale	Sostituto
FM/AM	Shift + TV/Radio / Program
VCR	Shift + 4
Analog/Digital	Smart / List
FM/Mode	AV / Input / RDS
Surround	Eject / Surround
DSP	Text / Goto
Surround DSP	Sound / Title
Dimmer	Shift + Mute / Dimmer
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
VCR CH+	Shift + CH+ /
Tv CH+	CH+ / Page+
Tv Vol+	Shift + Vol+
Vol+	Vol+
VCR CH-	Shift + CH- /
Tv CH-	CH- / Page-
Tv Vol-	Shift + Vol-



Mode

