




Originale	Sostituto
 Standby	 Power
 P.STD	 Shift + Format
 10+	 Pre Ch
 Open / Close	 Eject
 Scan	 Smart
 Swap	 Back
 Call	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 -/--	 Shift + Guide
 Source	 AV
 Nicam	 List
 DTV / DVD	 TV/R
 P +	 Ch +
 P -	 Ch -
 V +	 Vol +
 V -	 Vol -
 Menu	 Menu
 Zoom	 Shift + Eject
 Audio	 Dual
 Stop	 Stop
 Setup	 Options
 Pause / Step	 Pause
 Tune	 Shift + List
 << Rev	 <<





Originale	Sostituto	Originale	Sostituto
 >> Fwd	 >>	 Slow	 Shift + Play
 I<< Prev	 I<<	 D.Call	 Shift + Sleep
 >>I Next	 >>I	 Repeat	 Shift + Text
 D. Menu	 D. Menu	 Subcode	 Shift + Subt
 Exit	 Exit	 Mix	 Media
 EPG / Program	 Guide	 Text	 Text
 Up	 Up	 Hold	 Shift + Pause
 Down	 Down	 Reveal	 3D
 Right	 Right	 Size	 Format
 Left	 Left	 Time	 Shift + AV
 OK / Play / Enter	 Ok	 Mode	 Shift + 3D
 OK / Play / Enter	 Play	 Red	 Red
 Subtitle	 Subt	 Green / DTV /	 Green
 FAV / Angle	 Shift + Pre Ch	 Yellow / Lang	 Yellow
 i / Title / PBC	 Info	 Blue / Timer	 Blue
 Search	 Shift + TV/R		
 A - B	 Shift + Red		

Originale	Sostituto	Originale	Sostituto
 Slow	 Shift + Play	 TV	 MUTE
 D.Call	 Shift + Sleep	 DVD	 SHIFT
 Repeat	 Shift + Text	 SAT	 AUX
 Subcode	 Shift + Subt	 PLAY MODE	 REC MODE
 Mix	 Media	 TV	 DUAL
 Text	 Text	 SLEEP	 SUBT
 Hold	 Shift + Pause	 SOUND	 AD
 Reveal	 3D	 SEARCH	 PICTURE
 Size	 Format	 TV/R	 FORMAT
 Time	 Shift + AV	 E-MANUAL	 ZOOM
 Mode	 Shift + 3D	 REPEAT	 TIMER
 Red	 Red	 D.MENU	 TEXT
 Green / DTV /	 Green	 TOP MENU	 DISPLAY INFO
 Yellow / Lang	 Yellow	 MENU	 OK
 Blue / Timer	 Blue	 CLEAR	 RETURN BACK
		 EXIT	 VOL +
		 HOME	 SMART
		 APP MEDIA	 CH -
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	 FAV
		 0	 PRE-CH
		 GUIDE	
		 A	
		 B	
		 C	
		 D	

