




 


 





























Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 HDMI	 Shift + 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 Pre-CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Originale	Sostituto
 P+	 CH+ / Page+
 Vol-	 Vol-
 CH.List	 Shift + Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search





Originale

Sostituto

 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Family Story	 TV/Radio /
 Search	 Shift + Red / Netflix /
 3D	 Display / Media
 Support	 D.Menu / Top
 P.Size	 Zoom / Size
 AD/Subt.	 Audio / Lang I/II
 AD/Subt.	 Subtitle / EQ
 <</I<<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>/>>I	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Originale

Sostituto

