







 












 

 

 












Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 Pre-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 CH.List	 List
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Guide	 Guide
 Smart Hub	 Smart
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red



