


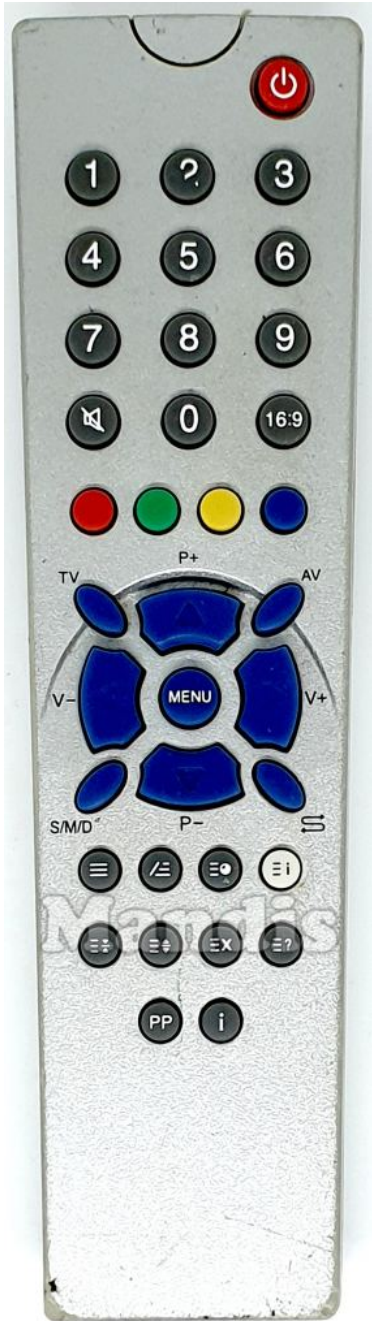


 





 

 






Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Mute	Mute
16:9	Format
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Originale	Sostituto
TV	TV/R
AV	AV
Up / P+	Up
Up / P+	Ch +
Down / P-	Down
Down / P-	Ch -
Right / V+	Right
Right / V+	Vol +
Left / V-	Left
Left / V-	Vol -
Menu	Menu
Menu	Ok
S / M / D	Smart
Recall	Pre Ch
Recall	Back
≡	Text
/=	Options





Originale		Sostituto	
	≡o	 SLEEP	Sleep
	≡i	 INFO	Info
	Hold		Pause
	Size	 ZOOM	Eject
	≡X	 CLEAR	Exit
	≡?	 E-MANUAL	D. Menu
	PP	 APP	Media
	i	 SHIFT +  DISPLAY	Shift + Info

Originale	Sostituto

