 



 

 

 

 

 

 

 



 

 

 

 

 





 



 

 

 







Originale	Sostituto
 On/Off	 Power
 Mute	 Mute / Dimmer
 Info	 Info / Angle
 Sleep	 Sleep / Timer
 FM	 Display / Media
 AM	 Smart / List
 CD	 Shift + 3
 AUX	 7
 1	 1
 2	 2
 Tune/Trk >>	 >> / Tune+
 3	 3
 4	 4
 Vol+	 Vol+
 << Tune/Trk	 << / Tune-
 5	 5
 6	 6

Originale	Sostituto
 Vol-	 Vol-
 Play CD	 Play / Slow
 Pause CD	 Pause / Step / Freeze
 Stop CD	 Stop / Hold
 < MP3 Folder	 Left
 > MP3 Folder	 Right

