 


 




 







 







 















































Originale		Sostituto		Originale		Sostituto	
	Power		Power		-/--		Shift + Guide / EPG / -/--
	Mute		Mute / Dimmer		Jump		Smart / List
	Source		AV / Input / RDS		Menu		Menu / Home
	P.Mode		Picture / Format		Info		Info / Angle
	S.Mode		Sound / Title		Sleep		Sleep / Timer
	I/II/Audio		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	P.Size		Zoom / Size		Up		Up
	1		1		Left		Left
	2		2		Enter		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		P-		CH- / Page-
	8		8		P+		CH+ / Page+
	9		9		Red/D.Setup		Red / Netflix / Search
	0		0		Red/D.Setup		Setup / OPT /





	Originale	Sostituto	Originale	Sostituto
	Green/Repeat	Green / APP / Repeat		>> / Preset+
	Yellow/Zoom	Yellow / YouTube / Repeat		D.Menu / Top
	Yellow/Zoom	+ Shift + Zoom /		Text / Goto
	Blue/Goto	Blue / Prime Video / Random		Subtitle / EQ
	Blue/Goto	+ Shift + Text /		Guide / EPG / -/--
	[≡i]/FAV.CH	Fav / Marker / PC		
	[≡?]/Freeze	+ Shift + Pause / Step /		
	[≡♦]/USB/SD	+ 8		
	[≡+]/Tv/Radio	TV/Radio /		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	Open/Close	Eject / Surround		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	<<	<< / Tune-		
	>>	>> / Tune+		
	I<<	I<< / Preset-		

