 


 




 







 







 















































Originale		Sostituto		Originale		Sostituto	
	Power		Power		-/--		Shift + Guide / EPG / -/--
	Mute		Mute / Dimmer		Jump		Smart / List
	Source		AV / Input / RDS		Menu		Menu / Home
	P.Mode		Picture / Format		Info		Info / Angle
	S.Mode		Sound / Title		Sleep		Sleep / Timer
	I/II/Audio		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	P.Size		Zoom / Size		Up		Up
	1		1		Left		Left
	2		2		Enter		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		P-		CH- / Page-
	8		8		P+		CH+ / Page+
	9		9		Red/D.Setup		Red / Netflix / Search
	0		0		Red/D.Setup		Setup / OPT /





	Originale	Sostituto	Originale	Sostituto
	Green/Repeat	 Green / APP / Repeat		>> / Preset+
	Yellow/Zoom	 Yellow / YouTube / Repeat		DVD Menu / D.Menu / Top
	Yellow/Zoom	 +  Shift + Zoom /		Text / Goto
	Blue/Goto	 Blue / Prime Video / Random		Subtitle / EQ
	Blue/Goto	 +  Shift + Text /		Guide / EPG / -/-
	[≡i]/FAV.CH	 Fav / Marker / PC		
	[≡?]/Freeze	 +  Shift + Pause / Step /		
	[≡♦]/USB/SD	 +  Shift + 8		
	[≡+]/Tv/Radio	 TV/Radio /		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Open/Close	 Eject / Surround		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	<<	 << / Preset-		

