



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Eco		3D
	Input HEOS		6		Mute		Mute
	Input Internet Radio		7		Volume +		Vol +
	Input CBL/SAT		8		Volume -		Vol -
	Input DVD		9		Info		Info
	Input Blu-ray		Guide		Option		Options
	Input Aux1		0		Setup		Menu
	Input Game		Pre Ch		Back		Back
	Input Aux2		Shift + Smart		Back		Exit
	Input Media		Media		Up		Up
	Input CD		Smart		Down		Down
	Quick Select 1		D. Menu		Right		Right






 
 
 
 
 
 
 
 





 
 



 


 

 
 
 
 







Originale	Sostituto
Left	Left
Enter	Ok
I<< / Tune -	I<<
Play	Play
>>I / Tune +	>>I
<<	<<
Pause	Pause
Stop	Stop
>>	>>
Green / Sound Mode Movie	Green
Red / Sound Mode Music	Red
Blue / Sound Mode Game	Blue
Yellow / Sound Mode Pure	Yellow
1	Shift + 1
2	Shift + 2
3	Shift + 3
4	Shift + 4

Originale	Sostituto
5	Shift + 5
6	Shift + 6
7	Shift + 7
8	Shift + 8
9	Shift + 9
0	Shift + 0
Enter	Shift + Pre Ch
Sleep	Sleep





Originale	Sostituto
 Power	 Power
 Input TV Audio	 1
 Input Tuner	 2
 Input Bluetooth	 3
 Input Phono	 4
 Input USB	 5
 Input HEOS	 6
 Input Internet Radio	 7
 Input CBL/SAT	 8
 Input DVD	 9
 Input Blu-ray	 Guide
 Input Aux1	 0
 Input Game	 Pre Ch
 Input Aux2	 +  Shift + Smart
 Input Media	 Media
 Input CD	 Smart
 Quick Select 1	 D. Menu

Originale	Sostituto
 Quick Select 2	 Text
 Quick Select 3	 Eject
 Quick Select 4	 AV
 CH + / Page +	 Ch +
 CH - / Page -	 Ch -
 Mute	 Mute
 Volume +	 Vol +
 Volume -	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 Back	 Exit
 I<< / Tune -	 I<<
 Play	 Play



 

 







 


 

 


Originale	Sostituto	Originale	Sostituto
TUNE +	>>I / Tune +		>>I
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	1	+	Shift + 1
	2	+	Shift + 2
	3	+	Shift + 3
	4	+	Shift + 4
	5	+	Shift + 5
	6	+	Shift + 6
	7	+	Shift + 7
	8	+	Shift + 8
	9	+	Shift + 9
	0	+	Shift + 0
	Enter	+	Shift + Pre Ch
	Sleep		Sleep

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
1	Quick Select 1		D. Menu		Input Game		Pre Ch
	Enter	 + 	Shift + Pre Ch		Input Aux2	 + 	Shift + Smart
4	Quick Select 4		AV		Input Media		Media
3	Quick Select 3		Eject		Input CD		Smart
2	Quick Select 2		Text		CH + / Page +		Ch +
	Power		Power		CH - / Page -		Ch -
	Input TV Audio	1	1		Mute		Mute
	Input Tuner	2	2		Volume +		Vol +
	Input Bluetooth	3	3		Volume -		Vol -
	Input Phono	4	4		Up		Up
	Input USB	5	5		Down		Down
	Input HEOS	6	6		Right		Right
	Input Internet Radio	7	7		Back		Exit
	Input CBL/SAT	8	8		Left		Left
	Input DVD	9	9		Enter		Ok
	Input Blu-ray		Guide		Back		Back
	Input Aux1	0	0		I<< / Tune -		I<<





Originale	Sostituto
 Play	 Play
 >> / Tune +	 >>
 <<	 <<
 Pause	 Pause
 1	 +  Shift + 1
 2	 +  Shift + 2
 3	 +  Shift + 3
 4	 +  Shift + 4
 5	 +  Shift + 5
 6	 +  Shift + 6
 7	 +  Shift + 7
 8	 +  Shift + 8
 9	 +  Shift + 9
 0	 +  Shift + 0
 Stop	 Stop
 >>	 >>
 Sleep	 Sleep

Originale	Sostituto

