


 

 

 
 
 

 

 

 

 





 

 

 



 





 




Originale	Sostituto
Mute	 Mute / Dimmer
 Power	 Power
 AV	 AV / Input / RDS
 TV/RAD	 TV/Radio /
 Audio	 Audio / Lang I/II
 SUB	 Subtitle / EQ
 APP	 Shift + Green / APP /
 GUIDA	 Guide / EPG / -/-
 LISTA	 Smart / List
 Info	 Info / Angle
 Vol +	 Vol+
 Up	 Up
 P +	 CH+ / Page+
 Left	 Left
 OK	 OK
 Right	 Right
 Vol -	 Vol-

Originale	Sostituto
 Down	 Down
 P -	 CH- / Page-
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Originale	Sostituto	Originale	Sostituto
MENU	Menu	HOME MENU	Menu / Home
0	0	HDMI - SAT 0	0
TXT	TXT	GOTO TEXT	Text / Goto

