


 
 
 



 
 





 










 

 

 
 

 

 
 


 




 
 



 


 
 
 
 
 
 




| Originale | Sostituto |
|---|---|
|  Power |  Power |
|  Clock Timer |  3D |
|  Clock Timer Set |  Options |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/10 |  0 |
|  >10 |  Guide |
|  Clear |  Exit |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |

| Originale | Sostituto |
|---|---|
|  Sleep |  Sleep |
|  Enter |  Ok |
|  Tuner Memory |  TV/R |
|  Display |  Info |
|  Play |  Play |
|  Pause |  Pause |
|  Stop |  Stop |
|  >>I/Preset+ |  >>I |
|  I<</Preset- |  I<< |
|  >>/Tuning+ |  >> |
|  <</Tuning- |  << |
|  Album+ |  Ch + |
|  Album- |  Ch - |
|  Bass/Treble |  Dual |
|  DSG |  Smart |
|  Function |  Menu |

