



Originale	Sostituto	Originale	Sostituto
Standby	Power	Up	Up
1/VCR/DVR	1	Previous Menu/Muting	Menu / Home
2/CBL/SAT	2	Left/Playlist/Cat	Left
3/Game/TV	3	Enter	OK
4/AUX	4	Right/Playlist/Cat	Right
5/Multi CH	5	Setup	Setup / OPT /
6/DVD	6	Down	Down
7/Tape	7	Return	Back / Return
8/Tuner	8	Pause /<	Pause / Step / Freeze
9/CD	9	Play	Play / Slow
+10/10/-/-/D.Tun	Guide / EPG / -/-	Stop	Stop / Hold
0/11/Dimmer	0	<<	<< / Tune-
CLR/12/Sleep/Ent	Fav / Marker / PC	>>	>> / Tune+
CH Disc	CH+ / Page+	Stereo	Sound / Title
CH Disc Album-	CH- / Page-	Surround	Eject / Surround
Vol+	Vol+	< Listening Mode	+  Shift + Left
Vol-	Vol-	Listening Mode >	+  Shift + Right

Originale	Sostituto	Originale	Sostituto
Standby	Power	Up	Up
1/VCR/DVR	1	Previous Menu/Muting	Menu / Home
2/CBL/SAT	2	Left/Playlist/Cat	Left
3/Game/TV	3	Enter	OK
4/AUX	4	Right/Playlist/Cat	Right
5/Multi CH	5	Setup	Setup / OPT /
6/DVD	6	Down	Down
7/Tape	7	Return	Back / Return
8/Tuner	8	Pause /<	Pause / Step / Freeze
9/CD	9	Play	Play / Slow
+10/10/-/-/D.Tun	Guide / EPG / -/-	Stop	Stop / Hold
0/11/Dimmer	0	<<	<< / Tune-
CLR/12/Sleep/Ent	Fav / Marker / PC	>>	>> / Tune+
CH Disc	CH+ / Page+	Stereo	Sound / Title
CH Disc Album-	CH- / Page-	Surround	Eject / Surround
Vol+	Vol+	< Listening Mode	+  Shift + Left
Vol-	Vol-	Listening Mode >	+  Shift + Right





Originale	Sostituto
Test Tone/Audio	Audio / Lang I/II
CH Sel/Subtitle	Subtitle / EQ
Random Level-	Blue / Prime Video / Random
Repeat Level+	Green / APP / Repeat
Display	Display / Media
L.Night/DVD	Sleep / Timer
Cine FLTR/HDD	TV/Radio /

Originale	Sostituto








Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Enter	 OK
 1/VCR/DVR	 1	 Right/Playlist/Cat	 Right
 2/CBL/SAT	 2	 Setup	 Setup / OPT /
 3/Game/TV	 3	 Down	 Down
 4/AUX	 4	 Return	 Back / Return
 5/Multi CH	 5	 Pause/<	 Pause / Step / Freeze
 6/DVD	 6	 Play	 Play / Slow
 7/Tape	 7	 Stop	 Stop / Hold
 8/Tuner	 8	 <<	 << / Tune-
 9/CD	 9	 >>	 >> / Tune+
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 I<<	 I<< / Preset-
 0/11/Dimmer	 0	 >>I	 >>I / Preset+
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Stereo	 Sound / Title
 Guide/Top	 D.Menu / Top	 Surround	 Eject / Surround
 Up	 Up	 < Listening Mode	 CH- / Page-
 Previous Menu/Muting	 Menu / Home	 Listening Mode >	 CH+ / Page+
 Left/Playlist/Cat	 Left	 Test Tone/Audio	 Audio / Lang I/II

Originale	Sostituto	Originale	Sostituto
 Enter	 OK	 Enter	 OK
 Right/Playlist/Cat	 Right	 Enter	 OK
 Setup	 Setup / OPT /	 Enter	 OK
 Down	 Down	 Enter	 OK
 Return	 Back / Return	 Enter	 OK
 Pause/<	 Pause / Step / Freeze	 Enter	 OK
 Play	 Play / Slow	 Enter	 OK
 Stop	 Stop / Hold	 Enter	 OK
 <<	 << / Tune-	 Enter	 OK
 >>	 >> / Tune+	 Enter	 OK
 I<<	 I<< / Preset-	 Enter	 OK
 >>I	 >>I / Preset+	 Enter	 OK
 Stereo	 Sound / Title	 Enter	 OK
 Surround	 Eject / Surround	 Enter	 OK
 < Listening Mode	 CH- / Page-	 Enter	 OK
 Listening Mode >	 CH+ / Page+	 Enter	 OK
 Test Tone/Audio	 Audio / Lang I/II	 Enter	 OK





Originale	Sostituto
 CH Sel/Subtitle	 Smart / List
 Level-/Random	 Blue / Prime Video / Random
 Level+/Repeat	 Green / APP / Repeat
 Display	 Display / Media
 Play Mode VCR	 AV / Input / RDS
 L.Night/DVD	 Sleep / Timer
 Cine FLTR/HDD	 TV/Radio /

Originale	Sostituto







Originale	Sostituto	Originale	Sostituto
Standby	Power	Pause / <	Pause / Step / Freeze
1/VCR/DVR	1	Play	Play / Slow
2/CBL/SAT	2	Stop	Stop / Hold
3/Game/TV	3	<<	<< / Tune-
4/AUX	4	>>	>> / Tune+
5/Multi CH	5	I<<	I<< / Preset-
6/DVD	6	>>I	>>I / Preset+
7/Tape	7	Stereo	Audio / Lang I/II
8/Tuner	8	Surround	Eject / Surround
9/CD	9	< Listening Mode	Left
+10/10/-/-/D.Tun	Guide / EPG / -/-	Listening Mode >	Right
0/11/Dimmer	0	Level-/Random	Blue / Prime Video / Random
CLR/12/Sleep/Ent	Fav / Marker / PC	Level+/Repeat	Green / APP / Repeat
Disc/Album	CH+ / Page+	Display	Display / Media
Disc/Album CH-	CH- / Page-		
Vol+	Vol+		
Vol-	Vol-		

Originale	Sostituto	Originale	Sostituto
Standby	Power	Pause / <	Pause / Step / Freeze
1/VCR/DVR	1	Play	Play / Slow
2/CBL/SAT	2	Stop	Stop / Hold
3/Game/TV	3	<<	<< / Tune-
4/AUX	4	>>	>> / Tune+
5/Multi CH	5	I<<	I<< / Preset-
6/DVD	6	>>I	>>I / Preset+
7/Tape	7	Stereo	Audio / Lang I/II
8/Tuner	8	Surround	Eject / Surround
9/CD	9	< Listening Mode	Left
+10/10/-/-/D.Tun	Guide / EPG / -/-	Listening Mode >	Right
0/11/Dimmer	0	Level-/Random	Blue / Prime Video / Random
CLR/12/Sleep/Ent	Fav / Marker / PC	Level+/Repeat	Green / APP / Repeat
Disc/Album	CH+ / Page+	Display	Display / Media
Disc/Album CH-	CH- / Page-		
Vol+	Vol+		
Vol-	Vol-		





Originale	Sostituto
Standby	Power
1/VCR/DVR	1
2/CBL/SAT	2
3/Game/TV	3
4/AUX	4
5/Multi CH	5
6/DVD	6
7/Tape	7
8/Tuner	8
9/CD	9
+10/10/-/-/D.Tun	Guide / EPG / -/-
0/11/Dimmer	0
Disc/Album	CH+ / Page+
Disc/Album CH-	CH- / Page-
Pause/<	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold

Originale	Sostituto
<<	<< / Tune-
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	Left
Listening Mode >	Right
Play Mode/VCR	OK
L.Night/DVD	Sleep / Timer

