











 


 








 

 






Originale Sostituto














	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	C		Setup / OPT /
	0		0
	Saturn		Display / Media
	Book		Picture / Format
	N9UF		Shift + 9
	Text		Text / Goto

Originale Sostituto

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	V +		Vol+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	P +		CH+ / Page+
	V -		Vol-
	Down		Down
	P -		CH- / Page-
	Back		Back / Return
	i		Info / Angle
	<<		<< / Tune-
	I<<		I<< / Preset-





Originale	Sostituto
 NAV	 Smart / List
 >>	 >> / Tune+
 >>	 >> / Preset+
 Play / Pause	 Play / Slow
 Play / Pause	 Shift + Play /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
	 Menu / Home

Originale	Sostituto

