





















 













 






| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|---------------|-----------|-----------------------------|-----------|------------|-----------|--------------------------|
| | Power | | Power | | Subtitle | | Subtitle / EQ |
| | Eject | | Eject / Surround | | Zoom/Size | | Zoom / Size |
| | Tv/Radio | | Tv/Radio / | | Aspect | | Shift + Picture / Format |
| | Red/Goto | | Red / Netflix / Search | | Subpage | | Shift + Subtitle / EQ |
| | Red/Goto | | Shift + Text / | | Media | | Shift + Display / Media |
| | Green/Angle | | Info / Angle | | Play | | Play / Slow |
| | Green/Angle | | Green / APP / Repeat | | Pause | | Pause / Step / Freeze |
| | Yellow/Repeat | | Shift + Green / APP / | | << | | << / Tune- |
| | Yellow/Repeat | | Yellow / YouTube / Repeat | | >> | | >> / Tune+ |
| | Blue/A-B | | Shift + Blue / Prime | | Rec | | Rec / Rec Mode |
| | Blue/A-B | | Blue / Prime Video / Random | | D.Setup | | Setup / OPT / |
| | FAV | | Fav / Marker / PC | | Stop | | Stop / Hold |
| | Text | | Text / Goto | | I<< | | I<< / Preset- |
| | Freeze/Hold | | Shift + Stop / | | >>I/Index | | >>I / Preset+ |
| | Freeze/Hold | | Shift + Pause / Step / | | >>I/Index | | Smart / List |
| | EPG | | Guide / EPG / -/-- | | Menu | | Menu / Home |
| | D.Menu | | D.Menu / Top | | Lang/Audio | | Audio / Lang I/II |





| Originale | Sostituto |
|--|---|
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Sleep |  Sleep / Timer |
|  Down |  Down |
|  Title/Exit |  Shift + Sound / Title |
|  Title/Exit |  Exit / Cancel / Clear |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Display |  Display / Media |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |

| Originale | Sostituto |
|--|--|
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  Shift + Guide / EPG / -/-- |
|  Recall |  0 |
|  Source |  Back / Return |
|  P.Mode |  AV / Input / RDS |
|  S.Mode |  Picture / Format |
| |  Sound / Title |

