

 


 


 






 












Originale	Sostituto
Guide	 Guide / EPG / -/--
 Power	 Power
 Eject	 Eject / Surround
 Tv/Radio	 TV/Radio /
 Red/Goto	 Red / Netflix / Search
 Green/Angle	 Green / APP / Repeat
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Freeze/Hold	 Shift + Pause / Step /
 D.Menu	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Zoom/Size	 Zoom / Size
 Aspect	 Shift + Picture / Format
 Subpage	 Info / Angle
 Media	 Shift + Display / Media

Originale	Sostituto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I/Index	 >>I / Preset+
 Menu	 Menu / Home
 Lang/Audio	 Audio / Lang I/II
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down





Originale	Sostituto
EXIT TITLE	CLEAR EXIT CANCEL Title/Exit
+ VOL	+ VOL Vol+
MUTE	DIMMER MUTE Mute / Dimmer
+ CH	+ CH PAGE CH+ / Page+
- VOL	- VOL Vol-
DISPLAY	MEDIA DISPLAY Display / Media
- CH	- CH PAGE CH- / Page-
1	TV 1 1
2	DVD 2 2
3	CD - STB 3 3
4	VIDEO 4 4
5	TAPE 5 5
6	TUNER 6 6
7	AUX - HDD 7 7
8	USB 8 8
9	BLUETOOTH 9 9
-/--	SHIFT + -/-- GUIDE EPG Shift + Guide / EPG / -/--

Originale	Sostituto
0	HDMI - BAT 0 0
↶	RETURN BACK Back / Return
SOURCE	RDS AV INPUT AV / Input / RDS
P-MODE	FORMAT PICTURE Picture / Format
S-MODE	TITLE SOUND Sound / Title

