





































 

Originale	Sostituto
 Power	 Power
 Energy	 Display / Media
 Picture	 Picture / Format
 Sound	 Sound / Title
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 16:9/4:3	 Shift + Zoom /
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 TTX	 Text / Goto
 0	 0
 Recall	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 Home	 Shift + Menu /
 EPG/Hold	 Guide / EPG / -/-
 CH+	 CH+ / Page+





Originale	Sostituto
 Vol-	 Vol-
 FAV List	 Fav / Marker / PC
 Size	 Zoom / Size
 Play	 Smart / List
 CH- / Page-	
 Play / Slow	
 Stop / Hold	
 << / Tune-	
 >> / Tune+	
 Tv Pause	 Pause / Step / Freeze
 Goto	 Shift + Text /
 I<< / Preset-	
 >>I / Preset+	
 Rec / Rec Mode	
 Red / Netflix / Search	
 Green / APP / Repeat	
 Yellow / YouTube / Repeat	

Originale	Sostituto
 Blue	 Blue / Prime Video / Random

