
 




 









Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/R	 TV/R
 Last	 Back
 Menu	 Menu
 Exit	 Exit
 CH+	 Ch +

Originale	Sostituto
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 PG+	 >>
 PG-	 <<
 Audio	 Dual
 Mode	 Media
 EPG	 Guide
 Favor	 Pre Ch
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Originale	Sostituto
 Blue	 Blue
 Info	 Info
 Sleep	 Sleep
 Sub-T	 Subt
 Text	 Text

Originale	Sostituto

