



Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Recall		Back
	Tv/Radio		TV/R		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		EPG		Guide
	0		0		Subtitle		Subt
	Goto		Smart		Audio		Dual
	Favourite		Pre Ch		TTX		Text
	Menu		Menu		<<		<<
	Info		Info		>>		>>





	Originale	Sostituto	Originale	Sostituto
	I<<		I<<	
	>>I		>>I	
	Play		Play	
	Pause		Pause	
	Stop		Stop	
	Rec		Rec	
	Repeat	+	Shift + Text	
	Page+	+	Shift + Ch +	
	Page-	+	Shift + Ch -	
	PVR		Media	
	Red/USB		Red	
	Green/V-Format		Green	
	Yellow/Aspect		Yellow	
	Blue/Timer		Blue	

