



Originale	Sostituto
Power	Power
EPG	Guide / EPG / -/--
REP	TV/Radio /
Mute	Mute / Dimmer
Rec List	Shift + Rec / Rec Mode
CH List	Smart / List
Subtitle	Subtitle / EQ
Eject	Eject / Surround
Rec	Rec / Rec Mode
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
<<	<< / Tune-
>>	>> / Tune+
Source	AV / Input / RDS

Originale	Sostituto
Up	Up
Display	Display / Media
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9





Originale		Sostituto		Originale		Sostituto	
	0		0		Title / Reveal		Shift + Sound / Title
	Recall		Back / Return		PRO		Shift + Display / Media
	Fav		Fav / Marker / PC		LAN / Hold		Shift + Smart / List
	Vol +		Vol+		Size / A-B		Zoom / Size
	Picture		Picture / Format		Goto / Subpage		Text / Goto
	Nicam / A2		Audio / Lang I/II		Index / Slow		Info / Angle
	CH +		CH+ / Page+				
	Vol -		Vol-				
	Sound		Sound / Title				
	Sleep		Sleep / Timer				
	CH -		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue / Screen		Blue / Prime Video / Random				
	Setup / TV/Txt		Setup / OPT /				
	D-Menu /		D.Menu / Top				

Cancel

Menu

