



Originale	Sostituto
Power	Power
EPG	Guide / EPG / -/--
REP	TV/Radio /
Mute	Mute / Dimmer
Rec List	Shift + Rec / Rec Mode
CH List	Smart / List
Subtitle	Subtitle / EQ
Eject	Eject / Surround
Rec	Rec / Rec Mode
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
<<	<< / Tune-
>>	>> / Tune+
Source	AV / Input / RDS

Originale	Sostituto
Up	Up
Display	Display / Media
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9





Originale	Sostituto
0	0
Recall	Back / Return
Fav	Fav / Marker / PC
Vol +	Vol+
Picture	Picture / Format
Nicam / A2	Audio / Lang I/II
CH +	CH+ / Page+
Vol -	Vol-
Sound	Sound / Title
Sleep	Sleep / Timer
CH -	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue / Screen	Blue / Prime Video / Random
Setup / TV/Txt	Setup / OPT /
D-Menu /	D.Menu / Top

Originale	Sostituto
Title / Reveal	Shift + Sound / Title
PRO	Shift + Media / Display
LAN / Hold	Shift + Smart / List
Size / A-B	Zoom / Size
Goto / Subpage	Text / Goto
Index / Slow	Info / Angle

Cancel Menu

