 

 

 

 
 
 
 


 



 
 


 

 

 

 











Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Red	 Red
 Green	 Green
 Blue	 Blue
 Yellow	 Yellow
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide

Originale	Sostituto
 Recall	 Back
 P.Mode	 Format
 S.Mode	 Shift + Dual
 Display	 Info
 Sleep	 Sleep
 Source	 AV
 Audio/Nicam	 Dual
 Tv Menu	 Menu
 Exit	 Exit
 Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -





Originale		Sostituto		Originale		Sostituto	
	CH+		Ch +		Tv/Radio		TV/R
	CH-		Ch -		Auto		Options
	FAV		Pre Ch		EPG		D. Menu
	FAV+		Shift + Ch +				
	Repeat/FAV-		Shift + Ch -				
	Play		Play				
	Pause		Pause				
	Rec		Rec				
	<<		<<				
	>>/Hold		>>				
	I<</Index		I<<				
	>>I/Size		>>I				
	Text		Text				
	Stop/Subpage		Stop				
	Media		Media				
	Zoom/Reveal		Eject				
	Subtitle		Subt				

