


 
 

 

 



 





 
 


 
 



 


 
 



 
 
 

 
 

 



 

 


 
 






 

 




 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Blank	 Subt
 Energy Saving	 3D	 Ratio	 Smart
 Input	 AV	 Mute	 Mute
 1	 1	 Page Up	 Ch +
 2	 2	 Page Down	 Ch -
 3	 3	 Settings	 Options
 4	 4	 Picture	 Format
 5	 5	 Q.Menu	 D. Menu
 6	 6	 Back	 Back
 7	 7	 AV Mode	 TV/R
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Sleep	 Sleep	 Right	 Right
 Still	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 OK	 Ok
 Vol-	 Vol -	 Stop	 Stop

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Blank	 Subt
 Energy Saving	 3D	 Ratio	 Smart
 Input	 AV	 Mute	 Mute
 1	 1	 Page Up	 Ch +
 2	 2	 Page Down	 Ch -
 3	 3	 Settings	 Options
 4	 4	 Picture	 Format
 5	 5	 Q.Menu	 D. Menu
 6	 6	 Back	 Back
 7	 7	 AV Mode	 TV/R
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 Sleep	 Sleep	 Right	 Right
 Still	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 OK	 Ok
 Vol-	 Vol -	 Stop	 Stop





Originale		Sostituto		Originale		Sostituto	
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Simplink		Media				
	Key's Up		>>I				
	Key's Down		I<<<				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

