



 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Hold/EPG		Guide
	Mute		Mute		Red		Red
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue		Blue
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		I-II		Dual
	7		7		Source		AV
	8		8		Freeze		Options
	9		9		CH+		Ch +
	0		0		CH-		Ch -
	Back/S.Page		Back		Sleep		Sleep
	Text		Text		Menu		Menu
	Index/PVR List		Smart		DTV/Radio		TV/R
	Rec/Reveal		Rec		Exit		Exit
	Zoom/T.Shift		Eject		Aspect		3D





Originale	Sostituto
 P.MODE	 Format
 S.Mode	 +  Shift + Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Media	 Media
 Info/Slow	 Info
 Step/Subtitle	 Subt
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<
 >>	 >>

Originale	Sostituto
 FAV	 Pre Ch
 FAV+/Repeat	 +  Shift + Ch +
 FAV-/A-B	 +  Shift + Ch -

