


 
 
 


 


 
 
 

 





 
 

 
 
 
 
 

 
 

 
 
 


 
 













 

 



 













 









Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	[=/?]		Dual		0		0
	[=◆]/[+]/Wide		3D		PP		Pre Ch
	[=i]/Guide		Guide		[=]		Text
	[i]/Info		Info		Vol+		Vol +
	[=o]		Subt		Vol-		Vol -
	[=+]/[X]		Format		Mute		Mute
	[=x]/[·]		Options		P/CH+		Ch +
	[ / = ] / [ * ]		Smart		P/CH-		Ch -
	1		1		P<P/Swap		Back
	2		2		TV/DTV		TV/R
	3		3		AV/Source		AV
	4		4		Menu		Menu
	5		5		-/--		Shift + Guide
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down





Originale	Sostituto
 Right	 Right
 Left	 Left
 OK/Select	 Ok
 Red/↑	 Red
 Green/↓	 Green
 Yellow	 Yellow
 Blue	 Blue

Originale	Sostituto

