



Originale	Sostituto
Tv/Radio	TV/Radio /
Power	Power
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
Media	Display / Media
Lang.	Audio / Lang I/II
SUB	Subtitle / EQ
Guide	Guide / EPG / -/--
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right

Originale	Sostituto
FAV.	Fav / Marker / PC
Down	Down
X/Exit	Exit / Cancel / Clear
Vol+	Vol+
Mute	Mute / Dimmer
P+	CH+ / Page+
Vol-	Vol-
i	Info / Angle
P-	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow/Timer	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
1	1
2	2
3	3
4	4





Originale	Sostituto	Originale	Sostituto
5 jkl	5	TAPE 5	5
6 mno	6	TUNER 6	6
7 pqrs	7	AUX - HDD 7	7
8 tuv	8	USB 8	8
9 wxyz	9	BLUETOOTH 9	9
TTX	TTX	GOTO TEXT	Text / Goto
0 .e	0	HDMI - BAT 0	0
CH↵	CH Back	RETURN BACK	Back / Return

Originale	Sostituto

