




 



 



 



 

 







Originale	Sostituto
Open / Close	Eject / Surround
Operate	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
CH +	CH + / Page+
CH -	CH - / Page-
C / Erase	Shift + Exit / Cancel / Clear
Direct	Setup / OPT /

Originale	Sostituto
i	Info / Angle
Guide	Guide / EPG / -/--
Rec Mode	Shift + Rec / Rec Mode
Input	AV / Input / RDS
Timer On / Off	Sleep / Timer
Time Shift	Text / Goto
HDD	Shift + 7
DVD	Shift + 2
TV / DVD	TV/Radio /
Start Menu	Menu / Home
Up	Up
Rec List / DVD Top Menu	Smart / List
Right	Right
Down	Down
Original / Playlist / DVD Menu	D.Menu / Top
Left	Left
Exit	Exit / Cancel / Clear





Originale	Sostituto
 Return	 Back / Return
 << REV	 << / Tune-
 Set / Enter	 OK
 Play	 Play / Slow
 Green	 Green / APP / Repeat
 Red	 Red / Netflix / Search
 Blue	 Blue / Prime Video / Random
 >> FWD	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 Slow	 Shift + Play /
 REC	 Rec / Rec Mode
 Angle	 Shift + Info / Angle
 Stop / Live	 Stop / Hold
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Replay	 Sound / Title
 I<< / <II F.Adv / Day -	 I<< / Preset-

Originale	Sostituto
 >>I / F.Adv II> / Day +	 >>I / Preset+
 Still / Pause	 Pause / Step / Freeze
 Skip Search	 Shift + Red / Netflix /
 Chapter Mark	 Fav / Marker / PC
 Function	 Picture / Format
 REC Pause	 Shift + Pause / Step /
 On Screen Tamper Proof	 Vol+
 RGB OFF Tamper Proof	 Vol-
 Display / Back Light	 Display / Media
 REC Stop	 Shift + Stop /
 Direct REC TV	 Shift + Eject / Surround

